


Spare Parts Catalogue

PMD5050s


Generating sets

Valid for machine code: PR422TXA000


Revision: 0 (08/2012)

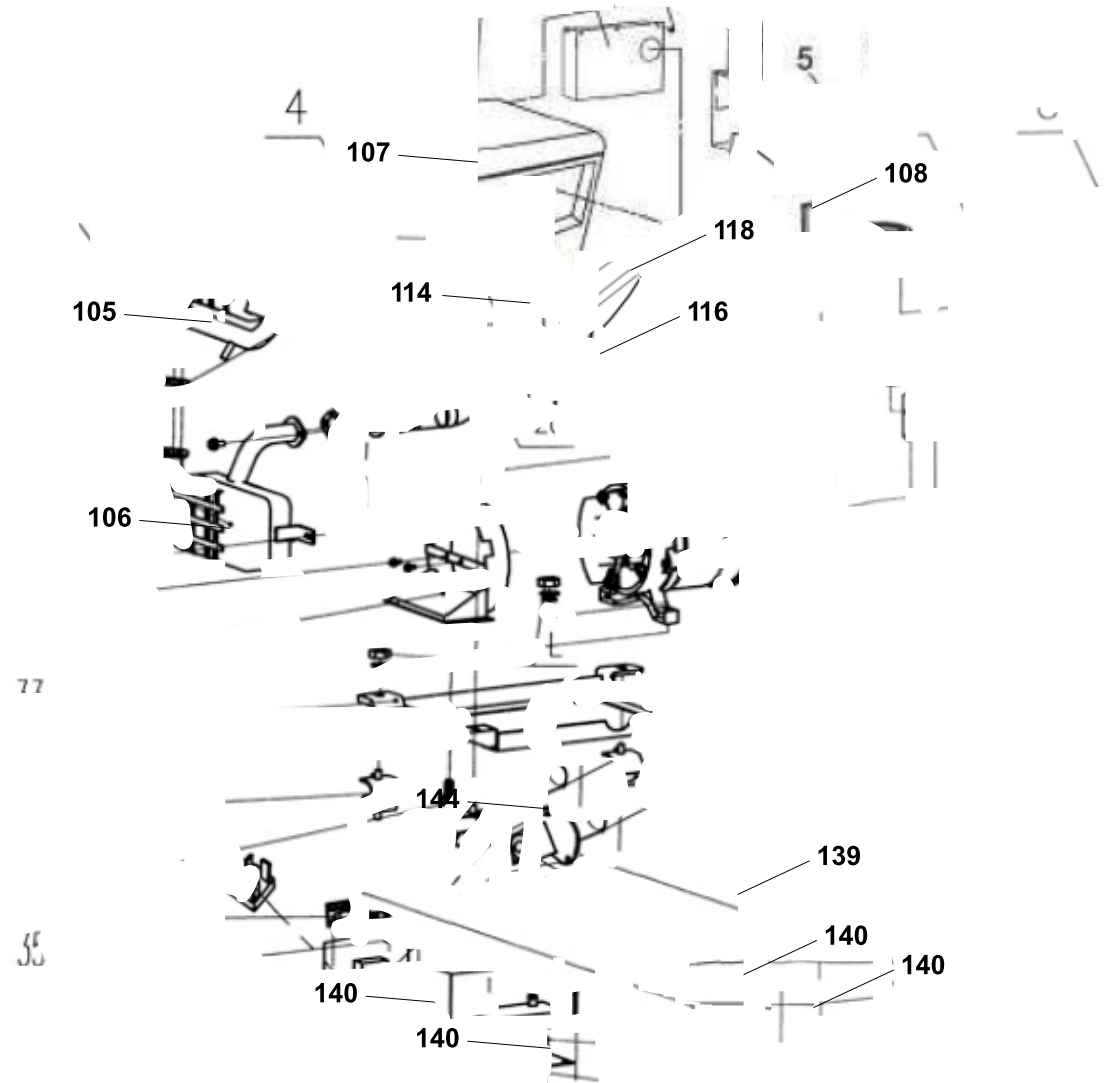


POSITION	PART NUMBER	DESCRIPTION	NOTES
105	PEG00030	UPPER SILENCER BL5000s	
106	PEG00031	LOW SILENCER BL5000s	
114	PEG00015	CAP FUEL TANK BL5000s	
116	PEG00014	FUEL TANK	
118	PGT00030	LEVELER ASSY OIL 6200/6250/7000	
139	PEG00010	BASAMENTO	
140	PEG00011	WHEELS BL5000s	
144	G089001	BATTERY 26Ah 12V SEALED - 205x132x185.5	

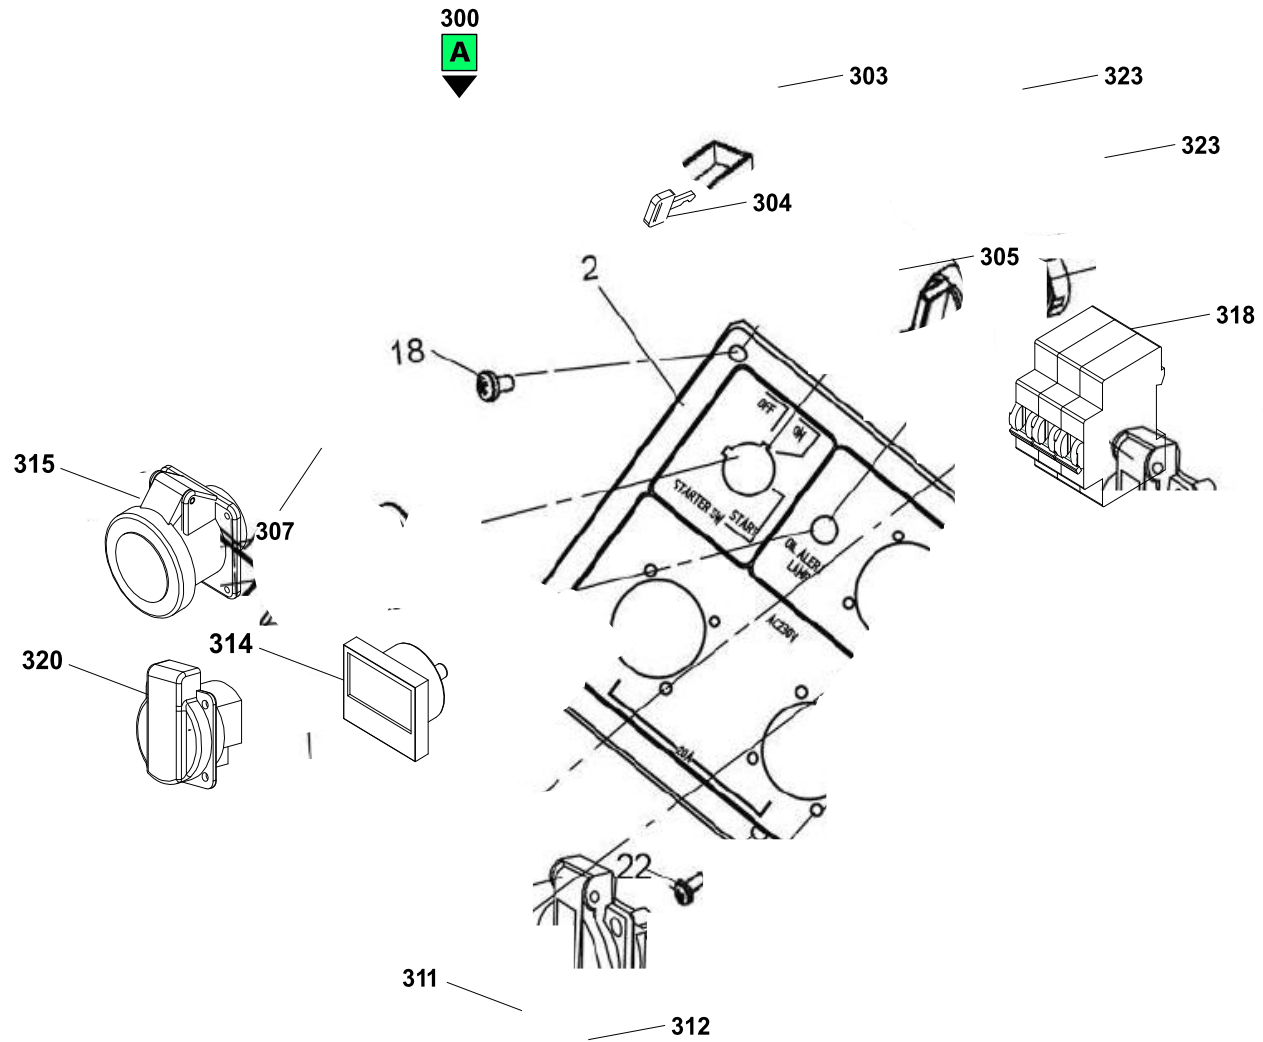

POSITION	PART NUMBER	DESCRIPTION	NOTES
300	PEG00044	PMD5050S EL. PANEL	
303	PEG00019	ELECTRIC START	
304	PEG00058	Key PMD5000S-2017	
305	PEG00047	Relay ON-ON 5 PIN 12V-30/40A	
306	G075560	MAGNETOTHERMIC SWITCH 3P 10A 4,5KA	
307	PEG00045	OIL ALARM LAMP	
309	G070693	FUSE SUPPORT 6,3x32	
311	G070110	BATTERY CHARGER BLACK SCREW TERMINAL	
312	G070109	BATTERY CHARGER RED SCREW TERMINAL	
314	PEG00037	DIGITAL DISPLAY HZ-V-HOUR	
315	G071127	PANEL MOUNT SOCKET 3P+N+T 380V 16A IP44 CEE	
318	PEG00070	3-Poles Circuit Breaker PMD5050S	
320	G071131	SOCKET SUBASSEMBLY, POWER SUPPLY	
323	G075260	RELAY 40A 12V	

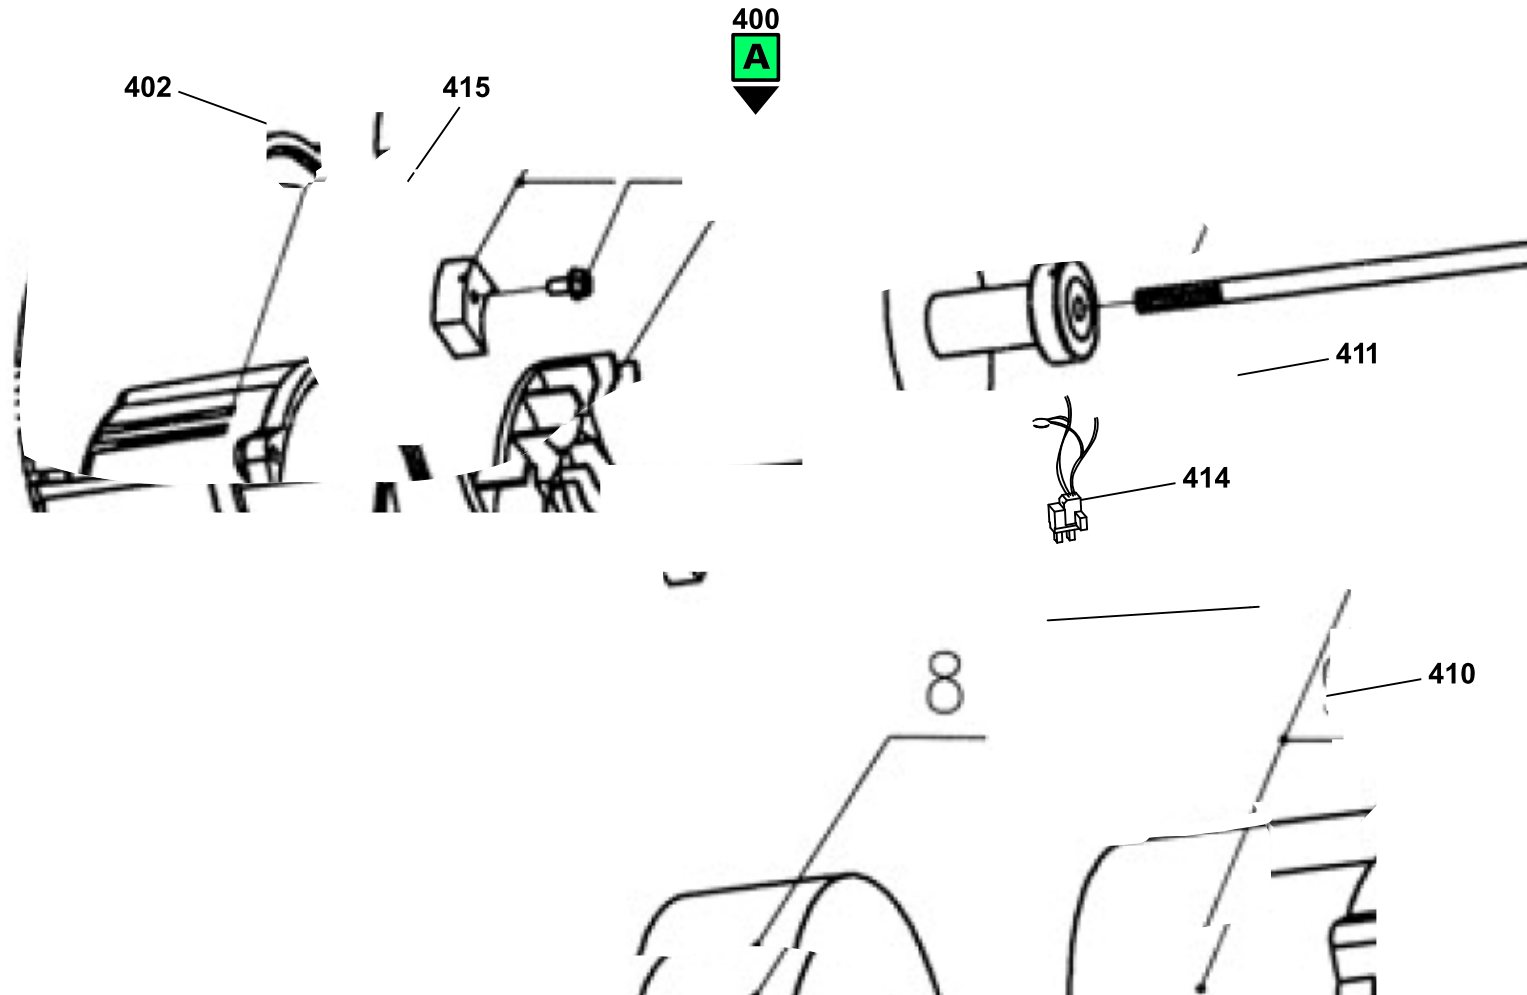

POSITION	PART NUMBER	DESCRIPTION	NOTES
400	PEG00028	ALTERNATORE BL5000S 3 PHASE 230/400V/50Hz	
410	PAA00037	Sost. dal PAA80008	
411	PAA00035	COLLETTORE	
414	PAA00104	BRUSH SUBASSEMBLY, CARBON 5000/8000	
415	PAA00012	PLASTIC FAN	

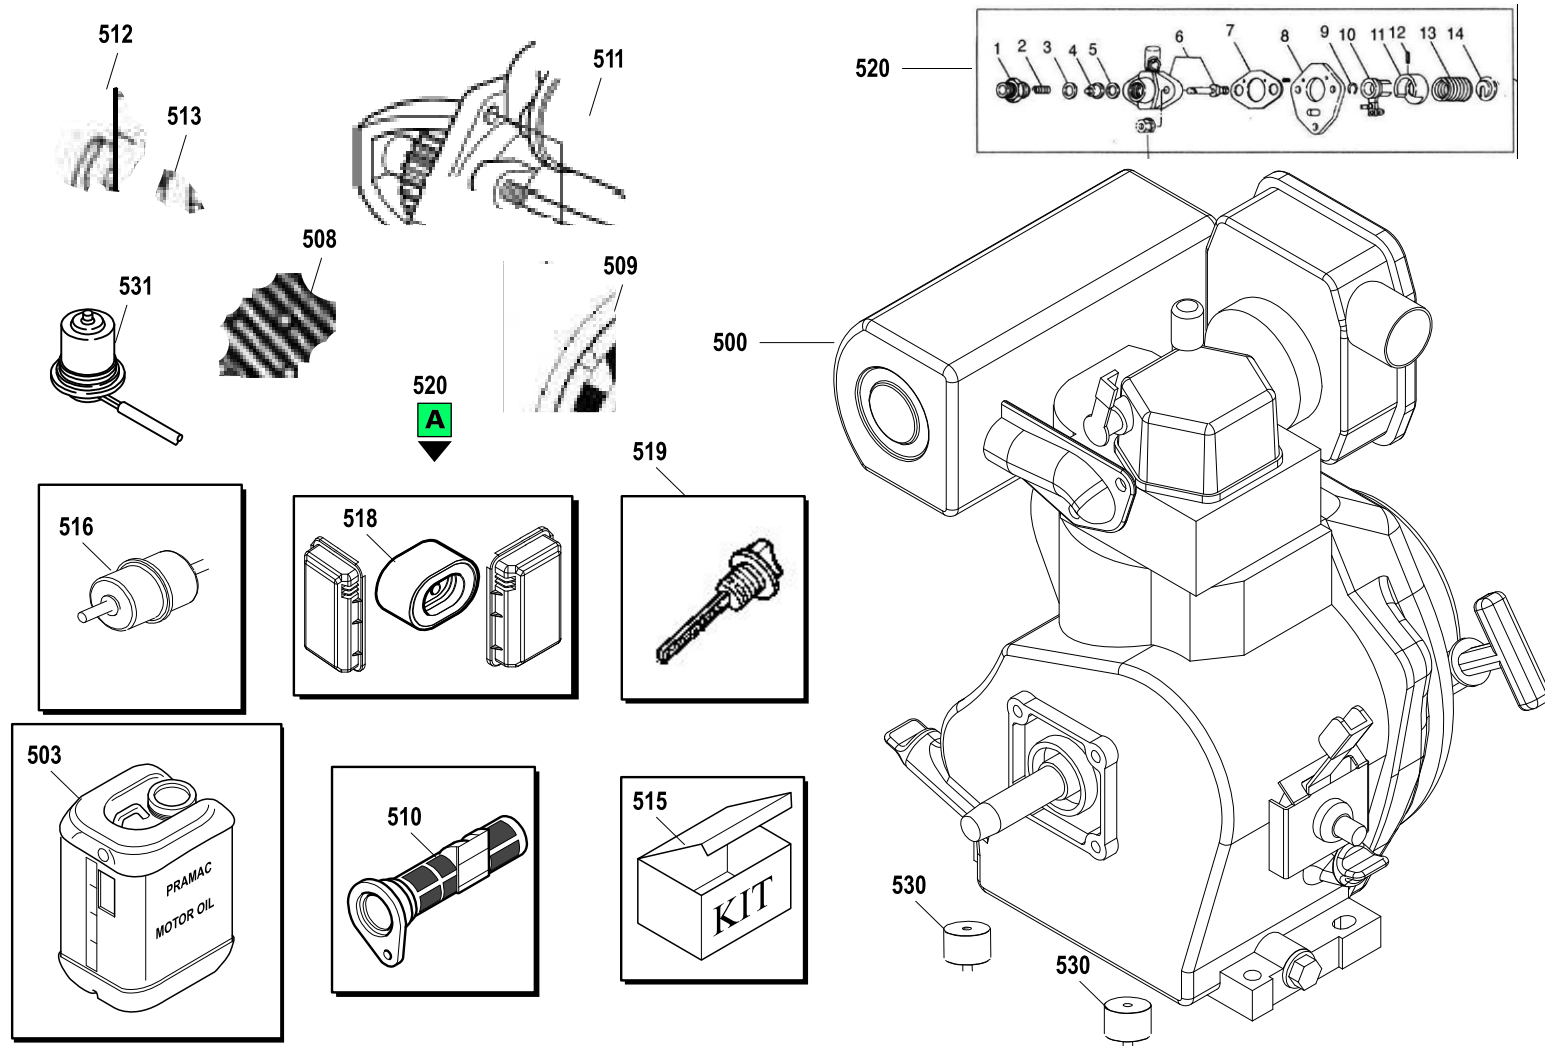

POSITION	PART NUMBER	DESCRIPTION	NOTES
500	PEG00029	DIESEL ENGINE 5.7KW/3000rpm - electric starter - without muffler/wind leading case/recoil start assembly - for BL5000S 1 phase	
503	P3KI00299	Kit Pramac Power	
508	PEG00023	ENGINE GOVERNOR BL5000S	
509	PEG00042	Flywheel alternator	
510	PEG861702103	OIL FILTER BL4500/BL6500 (Sost. da PEY00005)	
511	PEG00001	STARTER MOTOR BL6500	
512	PEG00038	Pump driving gear	
513	PEG00041	Governor fork tappet	
515	P3KI00215	KIT BL5000s	
516	G080101	FUEL FILTER FB1-01544 5u	
518	PEY00002	AIR FILTER	
519	PEG861702002	OIL FILLER CAP / LEVEL BL4500/BL6500	
520	PEG00024	INJECTON PUMP	
530	PEG86210201	DESCRIPTION N/A	
531	PEG00021	OIL SENSOR	